

warmlite
heating the heart of the home

2000W
CONVECTION HEATER

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **WL41007**



This product is only suitable for well insulated spaces or occasional use.



www.warmlite.co

TECHNICAL DATA

| | |
|--------------------|-------------------|
| Description: | Convection Heater |
| Model: | WL41007 |
| Rated Voltage: | 220-240V |
| Frequency: | 50-60Hz |
| Power Consumption: | 1800 – 2000W |

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

| | |
|------------|--|
| 2014/30/EU | Electromagnetic Compatibility Directive. |
| 2014/35/EU | Low Voltage Directive. |
| 2011/65/EU | Restriction of Hazardous Substances Directive. |

RK Wholesale LTD Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.


The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.

See back page for details.

WIRING SAFETY FOR UK USE ONLY

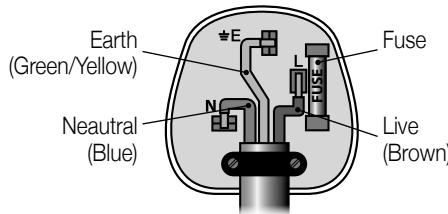

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

**Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] **

Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This Appliance MUST be Earthed

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- **DO NOT** immerse cords, plugs or any part of the appliance in water or any other liquid.
- **DO NOT** leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- **DO NOT** let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. **DO NOT** use extension cords with the appliance.
- **DO NOT** pull the plug out by the cord as this may damage the plug and/or the cable.
- **DO NOT** use this product for anything other than its intended use.
- This product is only suitable for well insulated spaces or occasional use.

- This appliance is for household use only.
- **DO NOT** carry the appliance by the power cord.
- **DO NOT** use the appliance outdoors.
- **DO NOT** use the heater unless the feet are correctly attached.
- Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains, furniture or any combustible materials as this could create a fire hazard.
- Allow a 50cm safe area around the heater on the top and sides and a 120cm safe area at the front of the appliance.
- The heater must not be located immediately below a mains socket outlet.
- **WARNING! DO NOT** cover the heater as this may lead to a fire risk.
- **WARNING! DO NOT** obstruct any of the openings of the heater.
- **WARNING! DO NOT** insert any object through any openings on the heater.
- Check from time to time for accumulated dust.
- **WARNING! DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- **WARNING! DO NOT** operate the heater on a timer, or leave on overnight.
- When not being used, please unplug the heater from the mains socket.
- Keep the mains lead away from the hot body of the heater and ensure that it is not pulled tight between the socket and the heater.
- **WARNING! DO NOT** use the heater in the immediate surroundings of a bath, a shower, a swimming pool or similar indoor locations and **DO NOT** touch hot surfaces.
- Always unplug the heater and allow it to cool before moving it from one location to another.
- **WARNING! DO NOT** attempt to dismantle or repair any part of the heater. This should only be done by a qualified service agent.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.



HIGH VOLTAGE



HOT SURFACE



DO NOT COVER

WHAT'S IN THE BOX

Instruction Manual

Convection Heater

2 Feet

4 Self Tapping Screws

| | |
|--------------------------|----------------------------|
| 1. Output Vents | 4. Thermostat Control knob |
| 2. Handles | 5. Feet |
| 3. Heat Control Switches | |



BEFORE YOUR FIRST USE:


1. Remove your appliance from the packaging.
2. Assemble your appliance.
3. Locate your appliance in accordance with the safety instructions.
4. Plug the appliance into the mains supply.
5. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

ASSEMBLY

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit.

These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side mouldings.

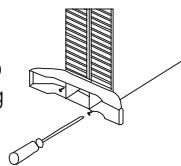

USING YOUR APPLIANCE

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

1. Choose a suitable location for the heater, taking into account the safety instructions.
2. Insert the plug of the heater into a suitable socket.
3. Turn the thermostat knob fully in a clockwise direction to the maximum setting.
4. There are 3 heat settings, 750W, 1250W & 2000W. To use your first heat setting, select the switch under the 750W mark. To use the second heat setting only switch on the switch under the 1250W mark. To use your third setting of 2000W switch on both switches at the same time. The power indicator light will light up once the switch is in the on position.
5. When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out.
6. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

CLEANING AND CARE

- Before cleaning always switch off the heater and remove the plug from the electrical socket.
- Ensure that the unit is cool enough to work on.
- To remove the dust, wipe the appliance with a dry cloth.
- Never use abrasive powders or solvents.
- If the heater shows any signs of wear or damage disconnect immediately from the mains supply, DO NOT use it – have it checked by a suitably qualified person.

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

| Model Identifier(s): WL41007 | | | | | |
|-----------------------------------|---|---------|------|--|------|
| Item | Symbol | Valve | Unit | Item | Unit |
| Heat Output | | | | Type of heat input for electric storage, local space heaters only (select one) | |
| Nominal heat output | Pnom | 1,8-2,0 | kW | Manual heat charge with integrated thermostat | N/A |
| Minimum heat output (indicative) | Pmin | 0,75 | kW | Manual heat charge control with room and/or outdoor temperature feedback | N/A |
| Maximum continuous heat output | Pmax, c | 2,0 | kW | Electronic heat charge control with room and/or outdoor temperature feedback | N/A |
| Auxiliary electricity consumption | | | | Fan assisted heat output | N/A |
| At nominal heat output | elmax | N/A | kW | Type of heat output/room temperature control (select one) | |
| At minimum heat output | elmin | N/A | kW | Single stage heat output and no room temperature control | No |
| In standby mode | elSB | 0 | kW | Two or more manual stages, no room temperature control | No |
| | | | | With mechanic thermostat room temperature control | Yes |
| | | | | With electronic room temperature control | No |
| | | | | Electronic room temperature control plus day timer | No |
| | | | | Electronic room temperature control plus week timer | No |
| | | | | Other control options (multiple selections possible) | |
| | | | | Room temperature control with presence detection | No |
| | | | | Room temperature control with open window detection | No |
| | | | | With distance control option | No |
| | | | | With adaptive start control | No |
| | | | | With working time limitation | No |
| | | | | With black bulb sensor | No |
| Contact Details: | Imported by RK Wholesale LTD., Berryhill Road, Stoke-on-Trent ST4 2NL | | | | |

NOTES

NOTES



NOTES

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products,
we are offering you an extra 1 year peace of mind.

*To receive your extra guarantee period, register your appliance online
within 28 days of purchase by visiting:

www.warmlite.co

Make sure to retain your original receipt.



Should you have a problem
with your appliance or need any spare parts please call our
Customer Support Team on:

+44 (0) 333 220 6056

Distributed throughout the UK by RK Wholesale LTD

warmlite
healing the heart of the home