



Please place  
postage stamp  
here

TO:  
CUSTOMER SERVICES DEPARTMENT  
WARMILITE  
SUTTON HOUSE,  
BERRYHILL ROAD,  
FENTON  
STOKE ON TRENT  
STAFFORDSHIRE,  
ST4 2NL.



## Instruction manual



WL44002

## Guarantee.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

## The following conditions apply:

The product must be returned to the retailer with the original proof of purchase.  
The product must be installed and used in accordance with the instructions contained in this instruction guide.  
It must be used only for domestic purposes.  
It does not cover wear and tear, damage, misuse or consumable parts.  
PFD has no responsibility for incidental or consequential loss or damage.  
Valid in the UK and Eire only.


## Technical Data

**Product code** WL44002


Power AC:220-240V~50Hz

Wattage 2000W

## Parts Identification

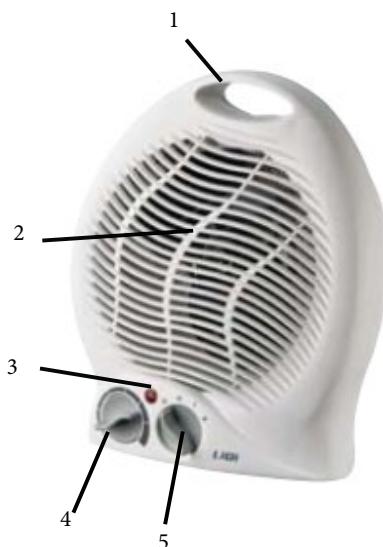

1. Carrying handle
2. Grill
3. Power/thermostat Indicator light
4. Fan Speed switch
5. Power Setting switch

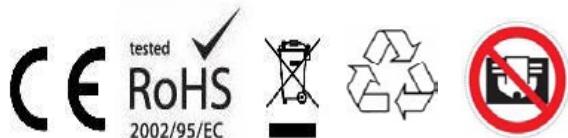


**Product Helpline. 0871 221 3618 For all your product needs.**

## Electrical Safety

The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW: EARTH (E)  
BLUE: NEUTRAL (N)  
BROWN: LIVE (L)

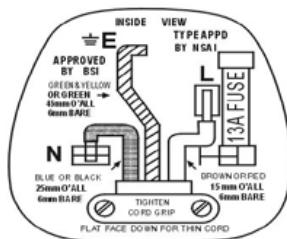

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN & YELLOW must be connected to the terminal in the plug which is marked with the letter "E" by the earth symbol  $\triangleleft E$  or coloured GREEN, GREEN/YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED

Always ensure that the Mains Cord is fixed into the plug through the Cord Guard or Cable Clamp, (plug wiring diagram above), and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) into position in the plug. Make sure that plug top is also fitted securely.

This appliance must be protected by a 13 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only a 13Amp ASTA approved BS1362 fuse (13A).

## PLEASE READ CAREFULLY –

Always maintain safety when working with any electric appliance  
Check that the mains voltage corresponds with the rating of the appliances  
Do not touch hot surfaces – Use handles or knobs

To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.

Do not leave any appliance unattended while it is operation.

This appliance is not intended for use by children or the infirm without adequate supervision and /or training by a person responsible for their safety  
Unplug from outlet when not in use or before cleaning. Allow to cool before putting on or taking off any parts.

Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person

The use of accessory attachment not recommended by the appliance manufacturer may cause injuries,

Do not use outdoors.

Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.

To disconnect-remove the plug from the outlet. Do not pull plug out by the cord.

No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

Never use the appliance near a bath, shower or a swimming pool.

Never place flammable objects or clothing on top of the heater.

Allow a 50cm safe area around the heater on the top and sides and a 120cm safe area at the front.

Never use a heater in a room with explosive gas such as petrol, or while using and kinds of flammable glues, sprays or solvents.

Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time for accumulated dust.

DO NOT COVER.

If overheating should occur, the built-in overheating safety device will shut the appliance off.

Do not insert any foreign objects into the grill.

Keep the rear grill clear of any draped fabric or curtains.

Children should be supervised to ensure that they do not play with the appliance

**Product Helpline. 0871 221 3618 For all your product needs.**

**Product Helpline. 0871 221 3618 For all your product needs.**

## OPERATION OF YOUR HEATER

Remove the heater from all packaging and place it in desired location. Ensure that there is a safe area between the heater and furniture, curtains, etc-50cm safe area from top and sides and 120cm safe area in front. Unwind the Power Cord and plug it into the Power Outlet. To activate the heater, turn the knob clock-wise to the '\*' position for cool air. Turn the knob to 'I' for low power, 'II' for maximum power.

## AUTO SATETY SHUT OFF

The heater has a built-in safety device, which will switch the heater OFF in case of accidental overheating. To reset the heater, follow the next steps:

- Turn the control setting to the 'O' position.
- Unplug the heater and wait 5-10minutes for the unit to cool down.
- After the unit has cooled, plug it in and operate normally.
- Turn selector switch into desired position (Fan, Low or High).
- Turn the thermostat switch to the desired temperature position.
- When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal direction until the appliance switches off.
- The thermostat switch will keep the room temperature at the desired temperature automatically.
- You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to the maximum position to make the temperature lower or higher.

Note: NEVER COVER THE HEATER

DO NOT IMMERSE IN WATER OR ANY LIQUID

Be sure to switch off the power supply and pull out the plug before cleaning.

Wait for the heater to cool down sufficiently.

Clean the body of the heater with a damp cloth. DO NOT ALLOW water into the appliance.

DO NOT use soap or chemicals which may damage the housing of the heater.

Allow sufficient drying time before operating again.

Clean the air inlets and outlets regularly with a vacuum cleaner (with regular use, at least twice a year)

When the unit is not in use, we recommend that the heater is re-packed in its original packaging and stored in a cool, dry place.

**Product Helpline. 0871 221 3618 For all your product needs.**

Dealer Stamp/Details:

If you would NOT like to receive special offers and promotions from PEL and its associated companies please tick this box



|                 |  |
|-----------------|--|
| Model no:       |  |
| Serial no:      |  |
| Batch no:       |  |
| Name:           |  |
| Address:        |  |
| Date Purchased: |  |
| E-mail Address: |  |

**IMPORTANT**  
This warranty is invalid if alterations have been made  
to this certificate